


# Prisma DI

## Change Transducer tip for

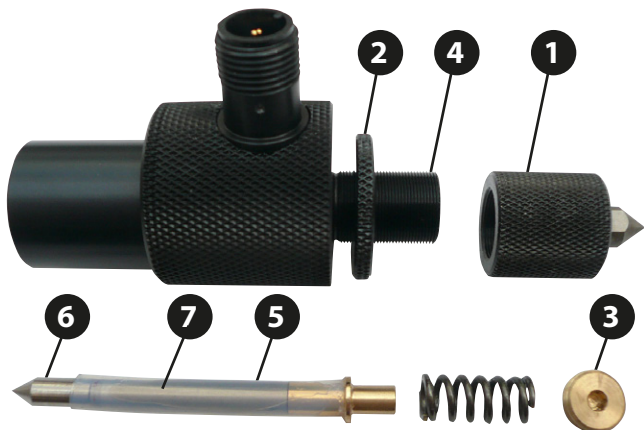

### Change of Transducer tip

1. Remove adjusting sleeve ① and locking ring ②
2. Unscrew the brass nut ③
3. Pull out the spring ④
4. Pull out the complete tip unit
5. Remove the teflon cover ⑤ if mounted
6. Unscrew the tip ⑥ from the core ⑦ and mount the new transducer tip
7. Remount in opposite order